 


silent block wall

SBW H20, SBW H30, SBW H60, SBW P60, SBW P105,
SBW R60, SBW R60H, SBW R120, SBW R120H, SBWRC120,
SBW S30, SBW S60, SBW S120, SBW T60, SBW T120

installation manual

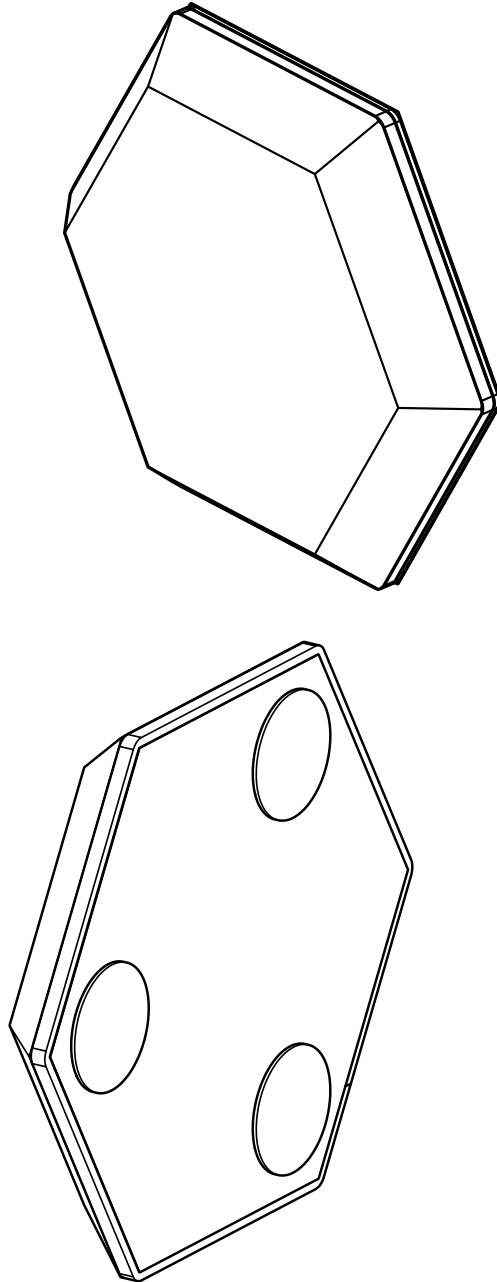 


bejot:

people




additional tools

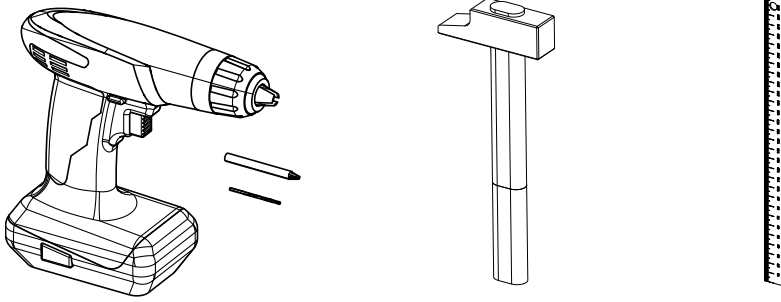


parts

 
1

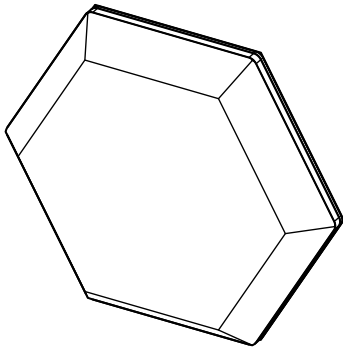

2

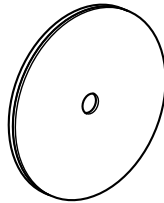 

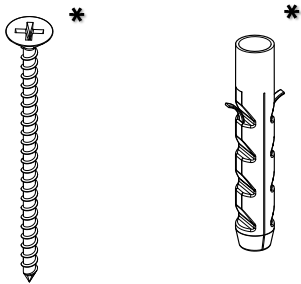 

attached




* - not added for assembly,
parts suitable for the ground



1*

model	quantity		
	second part 2	screw 	expansion plug 
SBW H20	3	3	3
SBW H30	4	4	4
SBW H60	6	6	6
SBW P60	5	5	5
SBW P105	5	5	5
SBW R60	4	4	4
SBW R60H	3	3	3
SBW R120	6	6	6
SBW R120H	5	5	5
SBW RC120	6	6	6
SBW S30	2	2	2
SBW S60	4	4	4
SBW S120	8	8	8
SBW T60	3	3	3
SBW T120	6	6	6



 
2

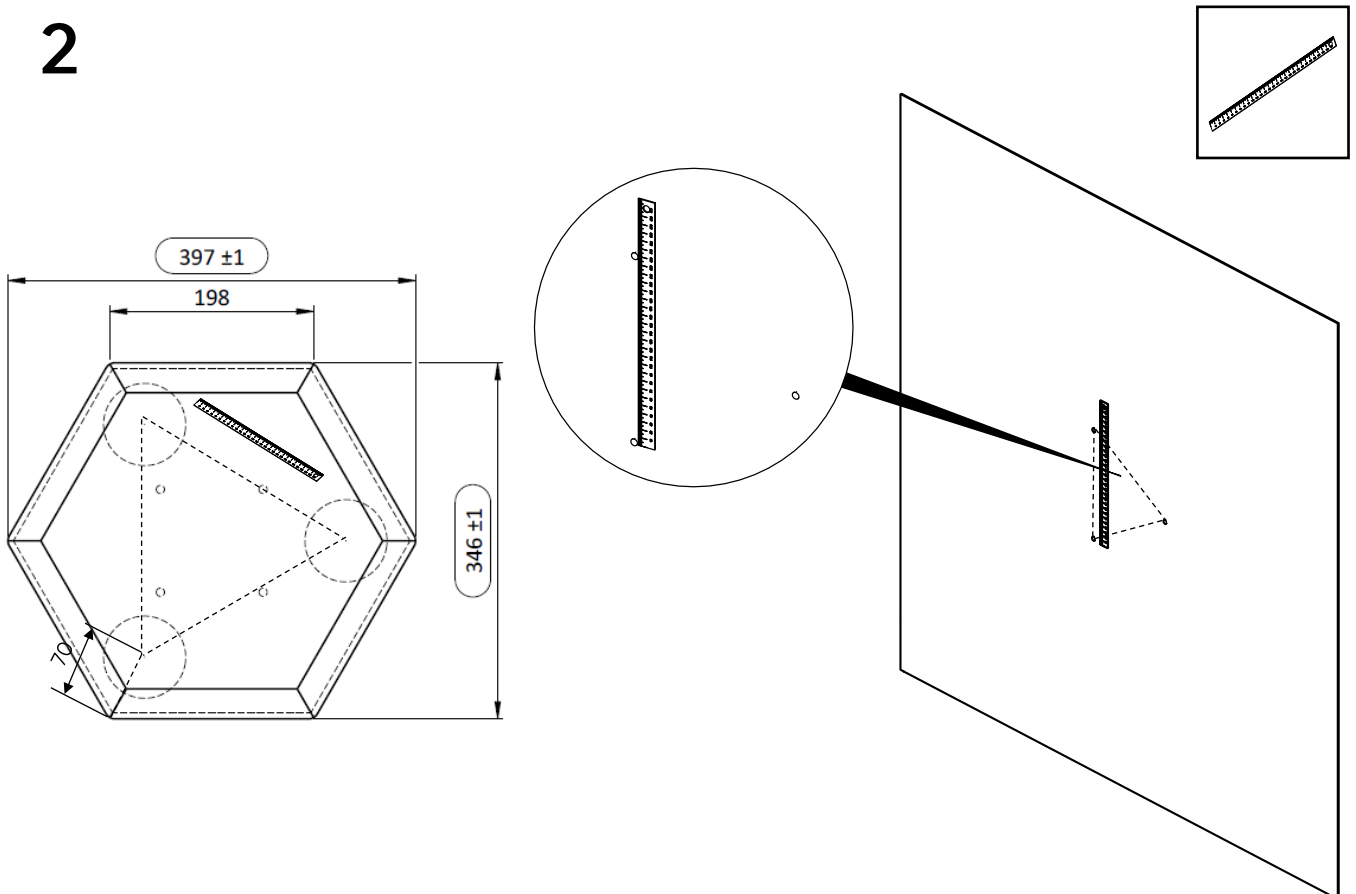


3

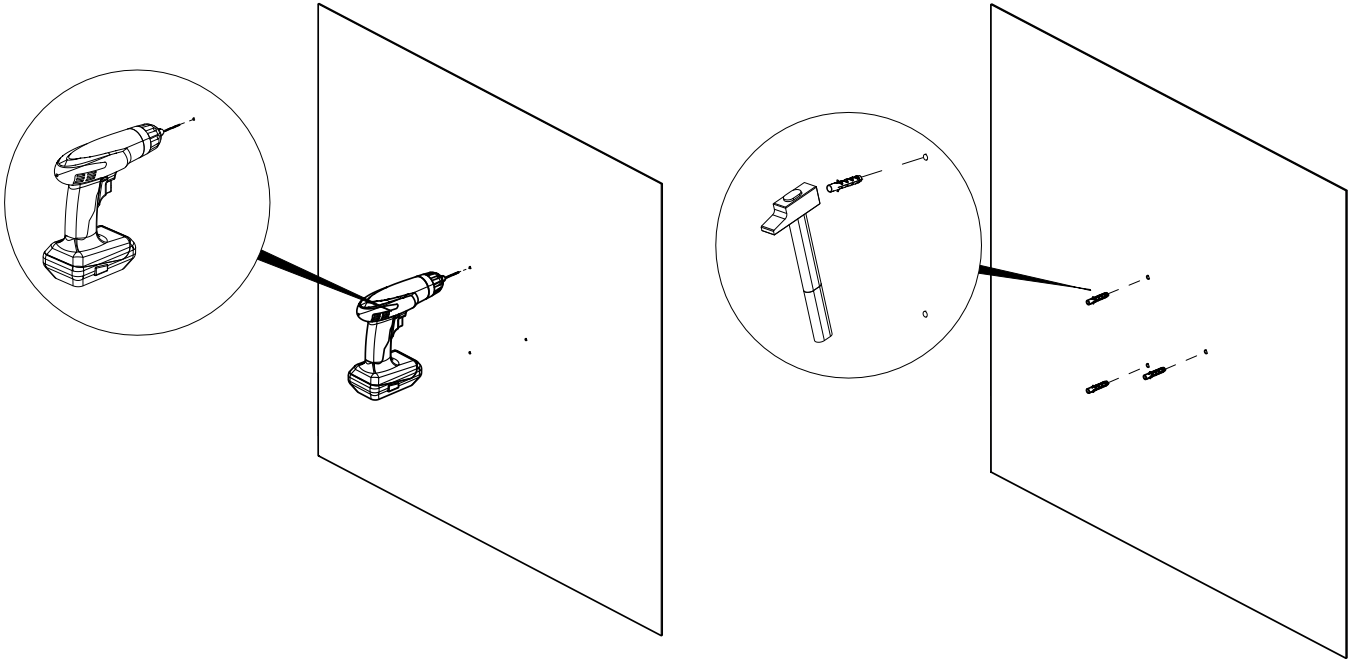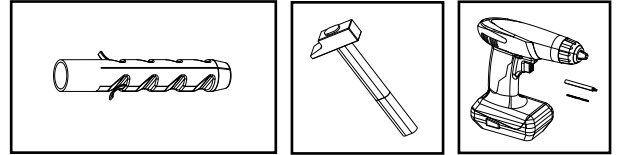  


4

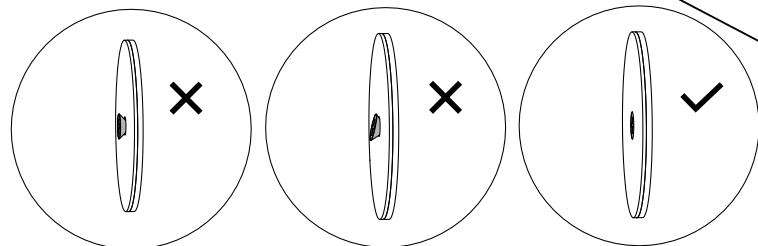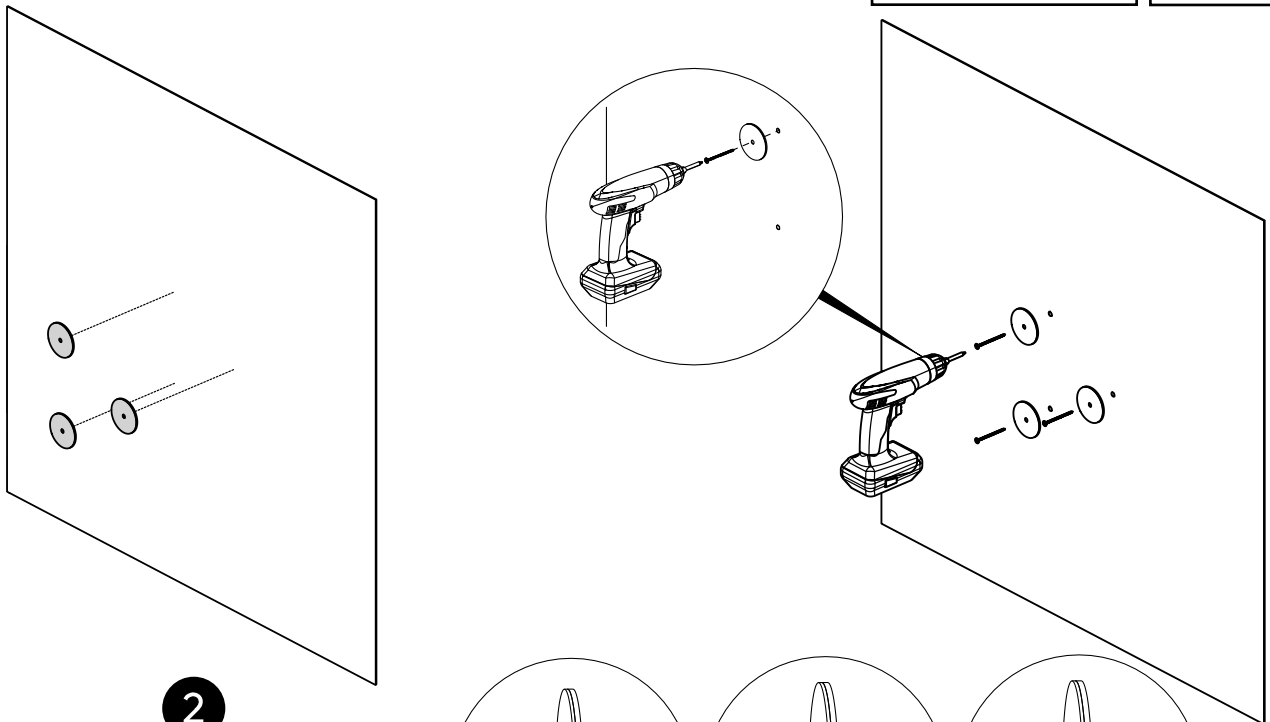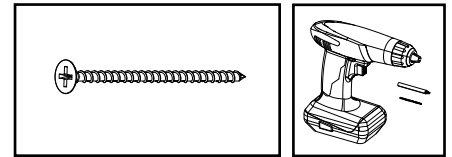   

5

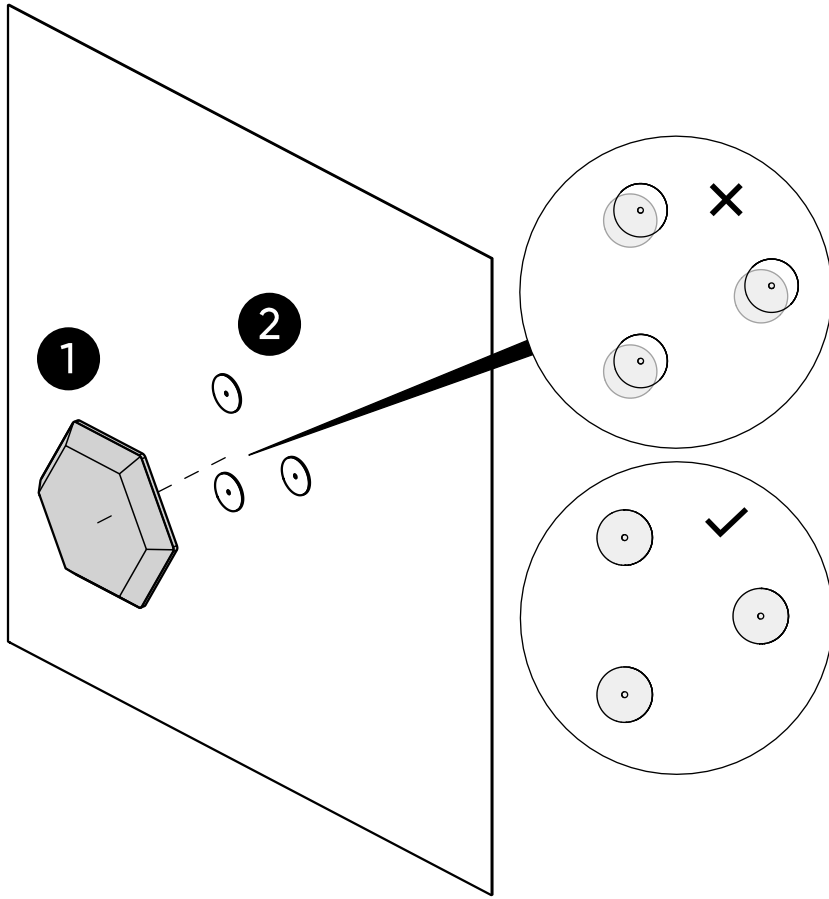 


6

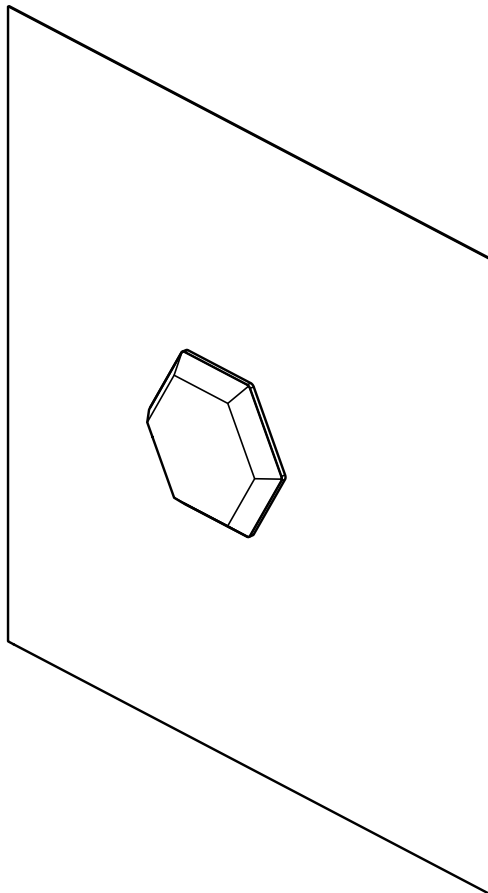 


7

dimensions

 
SBW H20

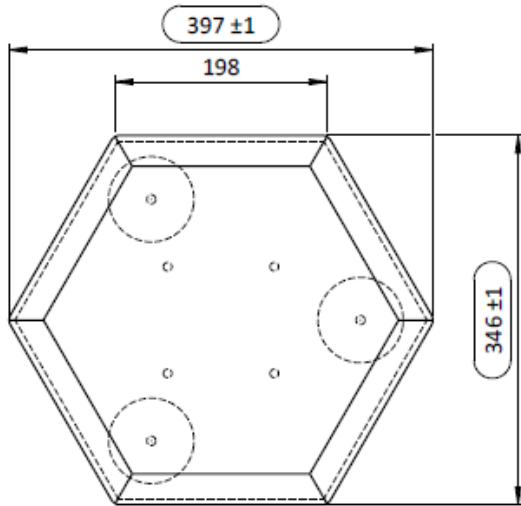


SBW H30

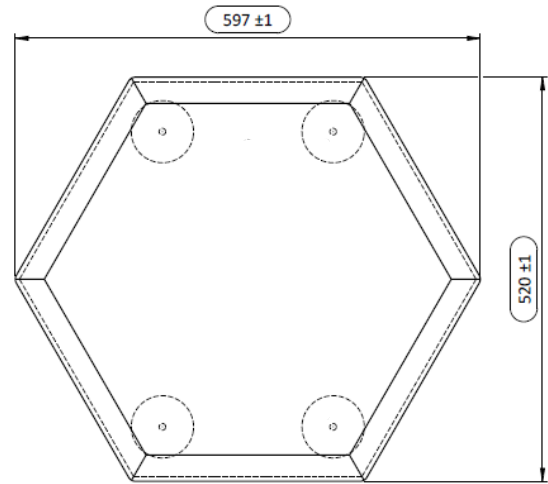 


SBW H60

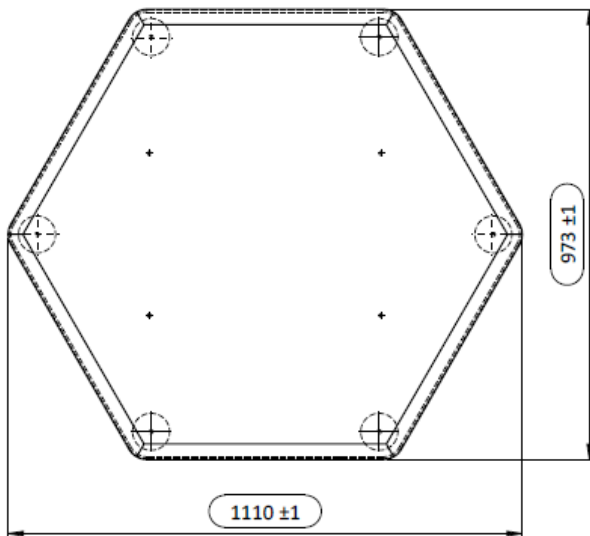 


SBW P60

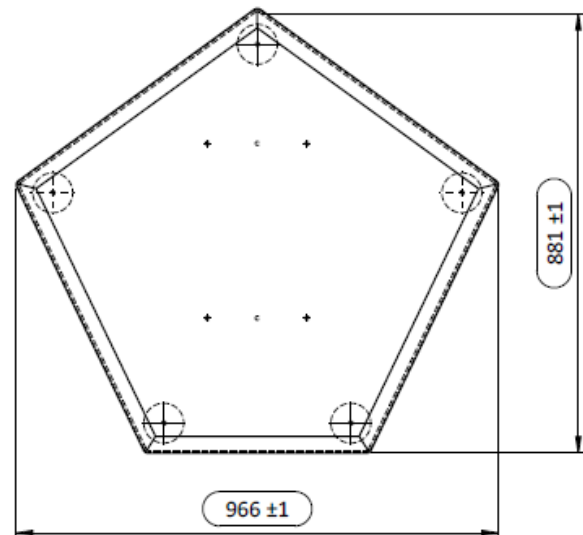 


SBW P105

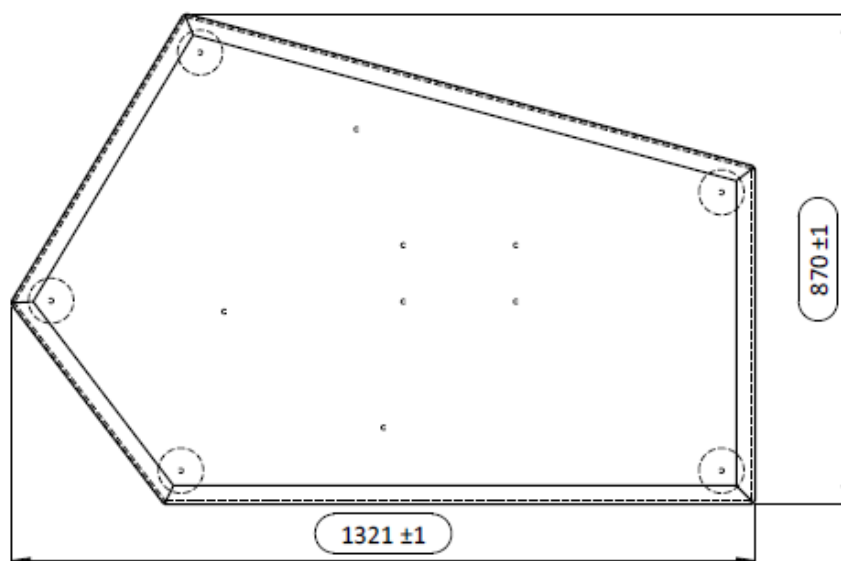 


SBW R60

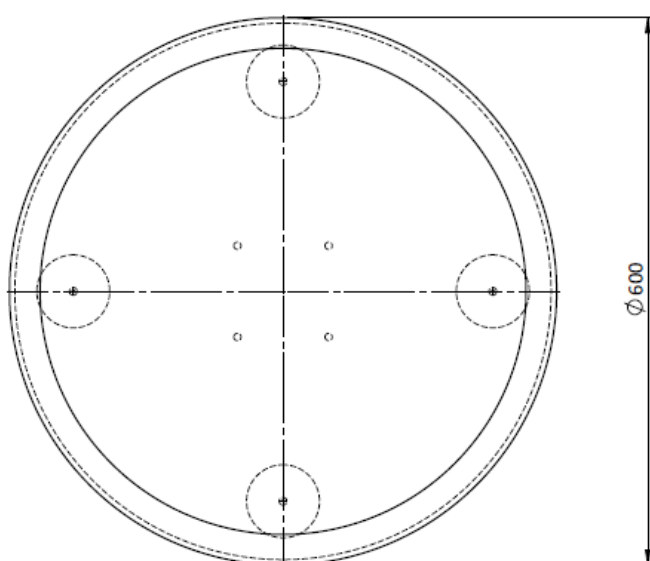 


SBW R60H

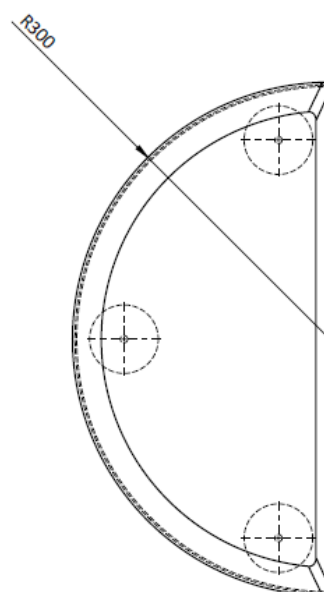 


SBW R120

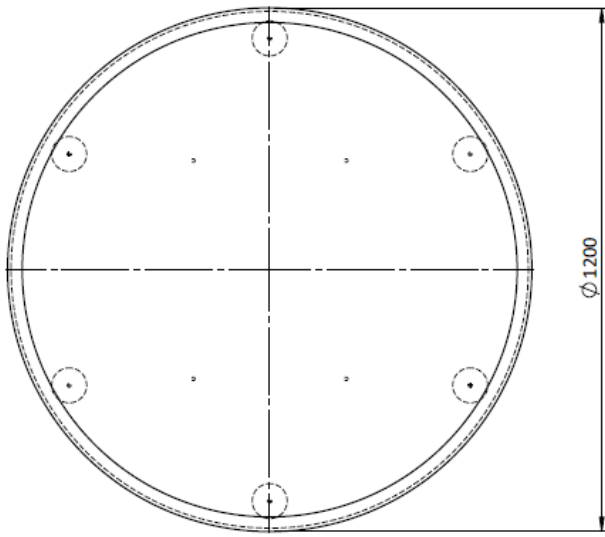 


SBW R120H

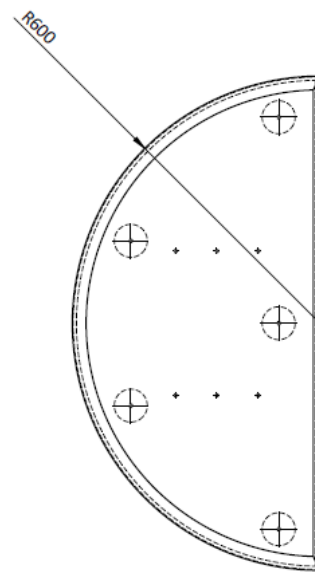 


SBW RC120

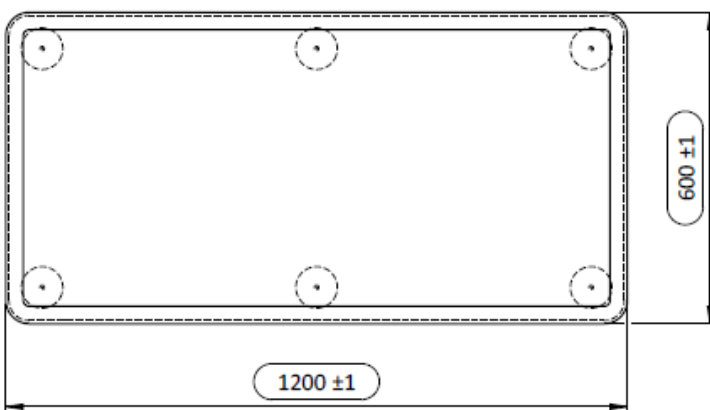 


SBW S30

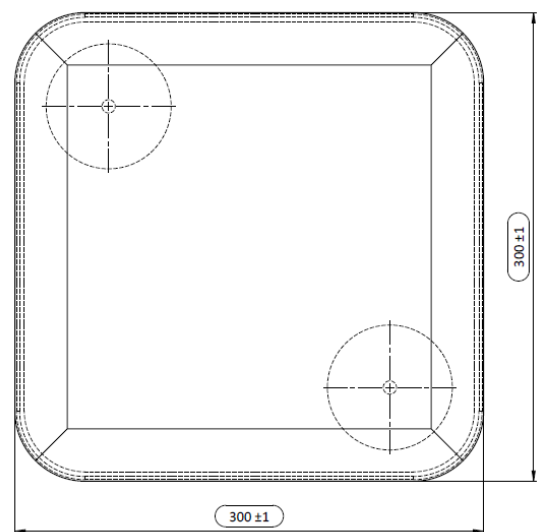 


SBW S60

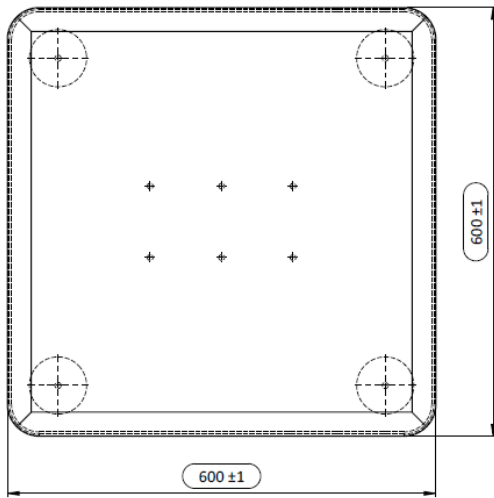 


SBW S120

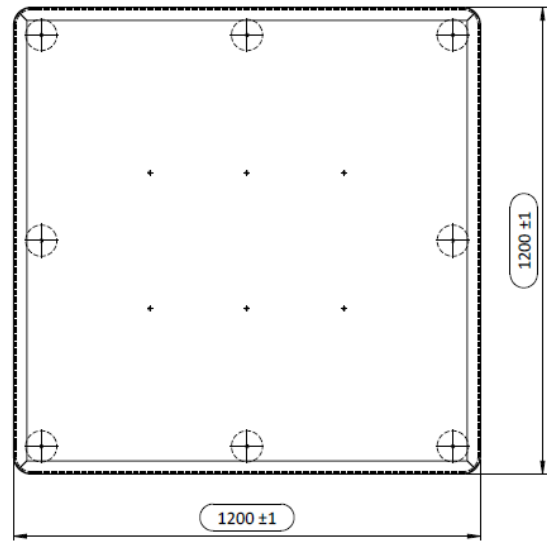 

SBW T60

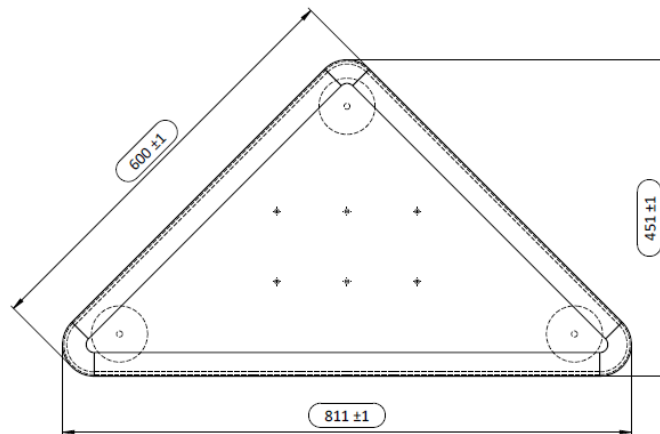 

SBW T120

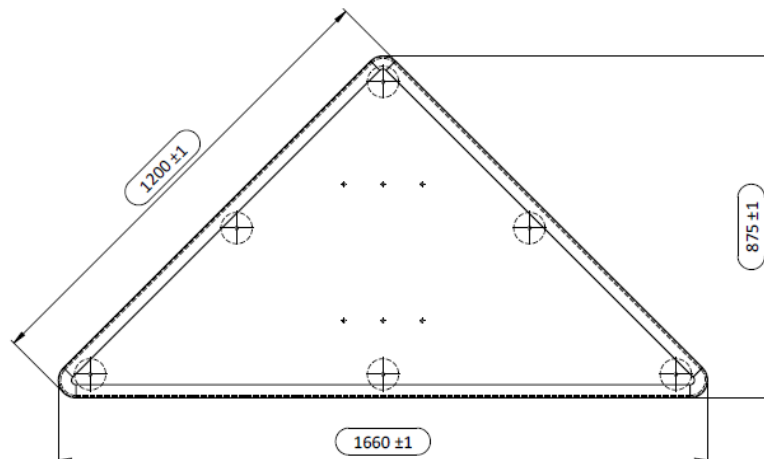 

Bejot Sp. z o. o.

ul. Wybickiego 2A, Manieczki, 63-112 Brodnica n. Poznania, POLAND

tel.: +48 (61) 281 22 25, e-mail: biuro@bejot.eu

www.bejot.eu

edition 11/2021